



ZS100 Series Z Swivel Instruction Manual

▲ WARNING

Failure to follow these instructions or to properly install and maintain this equipment could result in leakage causing property damage and personal injury or death.

Oasis products must be installed, operated and maintained by trained and competent personnel in accordance with all applicable local codes, rules and regulations in addition to the Oasis Instructions.

Oasis Engineering Ltd. will not be held liable in such circumstances where installation, operation and maintenance procedures were performed by incompetent personnel resulting in improper assembly, unsafe operation, equipment damage or personal injury.

Oasis Engineering Ltd
129 Birch Avenue, Tauranga, New Zealand.
T: +64 7 928 3808
E: hello@oasisengineering.co.nz
W: www.oasisengineering.co.nz





Installation Instructions

Setting The Standard

Tools Required






Thread Tape




Anti Seize Grease

- Swagelok Silver Goop
- Omega 99
- or similar


1. Apply thread tape then anti-seize to BSP thread and insert into z swivel.

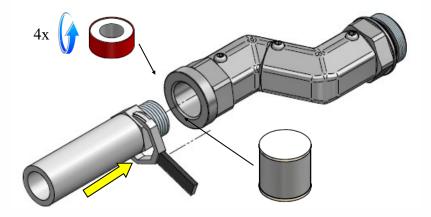

2. Tighten connection.

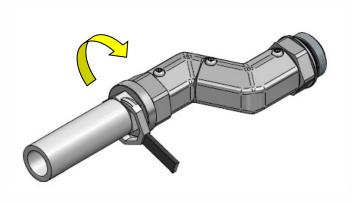

3. Apply anti seize to male thread and insert connection.

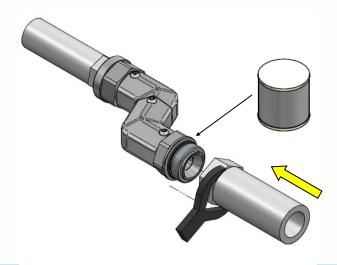

2




Installation Instructions

Setting The Standard

4. Tighten connection.



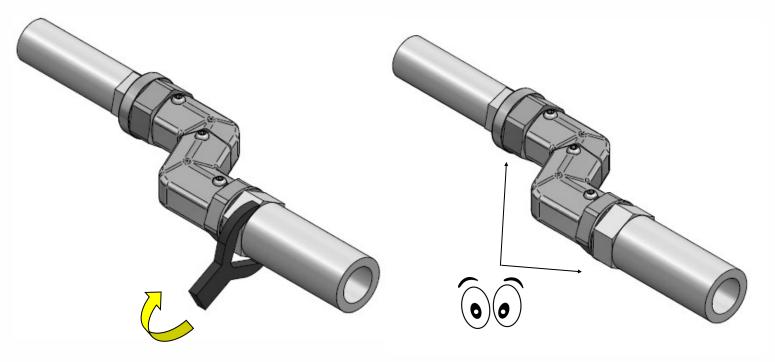

6. Installation complete.

